


## ◆◆ Procedure

The basic steps are shown below.

### 1. Entering the programming mode

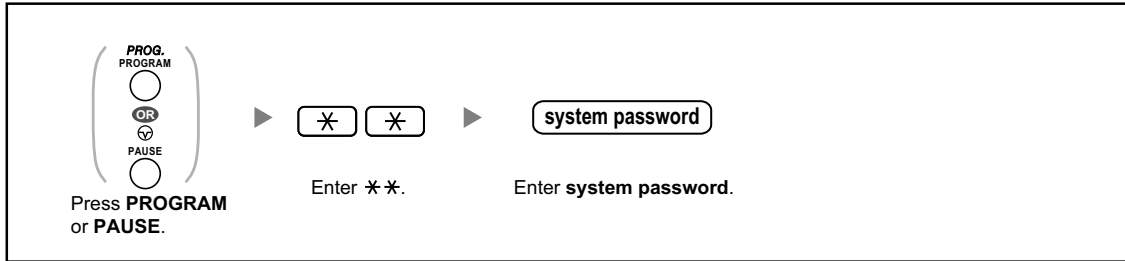


### 2. Programming

You can enter each programme number (3 digits).



- To exit the programming mode at any time, lift the handset.

### 3. Exiting the mode

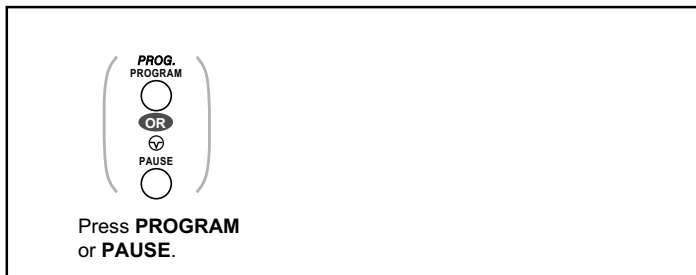


- To exit the programming mode at any time, lift the handset.

## 3.3.2 System Programming

### ◆◆ Date & Time [000]

The proprietary telephones display the current date and time while on-hook.

#### [In 12-hour Format]

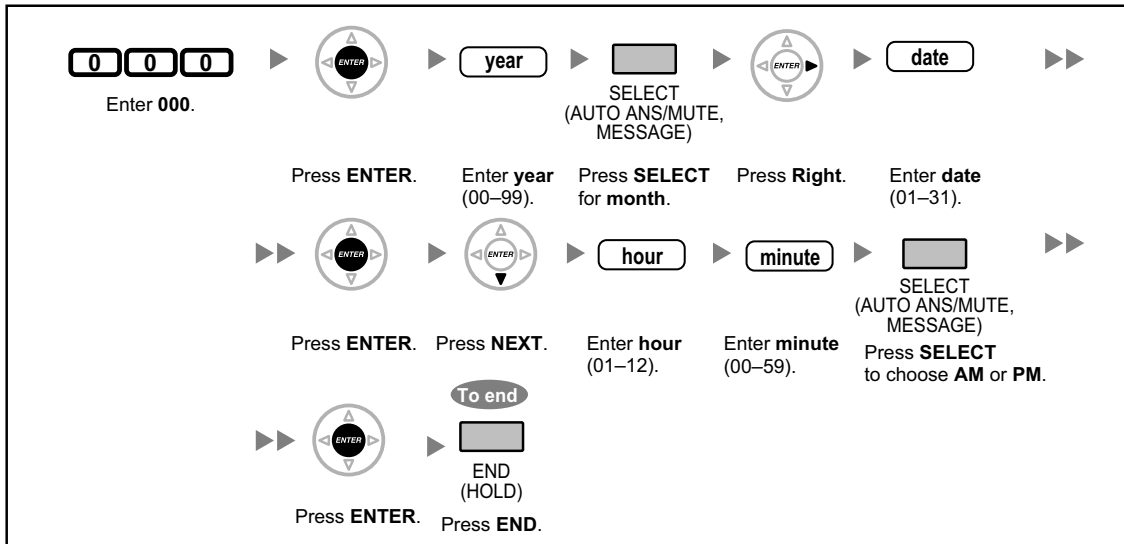

#### [In 24-hour Format]

